

# Operating Manual

---

## System Supervisor Unit

## Assistance and Information

### TimeLine

1755 La Costa Meadows Drive  
 Suite B  
 San Marcos, CA 92069

### Technical Support

Phone: (760) 761-4440  
 Fax: (760) 761-4449  
 SUPPORT@TIMELINEVISTA.COM

### Software Version

### Serial Number

Technical Assistance is available *ONLY* if the System Supervisor Unit is registered. Mail in your Warranty Card immediately to register the Supervisor.

**Remember;** when calling for technical support, you must provide the software version and System Supervisor serial number. This will enable us to give you accurate and prompt assistance.

## Copyright and Printing History

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means electronically, mechanical, photocopying, recording or otherwise, without the prior written permission of TimeLine Vista, Inc.

Each revision will cause the letter to the right of the manual part number to change. The purpose for each revision will be listed below. Events such as the addition of a feature or functional test will cause the revision number to change.

Internal Document Number: 73K006 Revision E

Revision Number	Approval Date	Serial No. Affected	Changes Made
B	6/10/93	N/A	Complete rewrite.
C	8/15/93	N/A	Miscellaneous editing changes.
D	2/1/95	N/A	Appendix: Pin assignments revised and Setup Tables added; Getting Started: Controller Setup Procedure revised; Advanced Features: Various editing changes; Installation: Various figures revised.
E	8/15/95	N/A	Additions to Table 5-1, page 6-20, and 7-34 to clarify cabling for SSU to Neve (RS422 (SSU) to RS232 (Neve).

## Limited Warranty

TimeLine Vista, Inc. (TimeLine), warrants this product against defects in material or workmanship as follows:

1. For a period of ninety (90) days from the date of purchase TimeLine will at its option, either perform necessary repairs at our expense or pay the labor charges of others it authorizes to repair the defective product. After the initial 90 day period labor charges are the responsibility of the purchaser.
2. In addition TimeLine will supply at no charge, new or rebuilt replacements for defective parts for a period of one (1) year from the date of purchase.

## Labor and Parts

To obtain warranty service, the purchaser must notify TimeLine in writing during the initial ninety (90) day period. TimeLine will then authorize the purchaser to take or deliver, prepaid, the product to TimeLine or it's authorized Service Center.

## Parts Only

During the remainder of the warranty period, any defective part will be replaced if the purchaser delivers/sends the product, prepaid to TimeLine. Labor incurred in the repair is at the purchaser's expense.

This Warranty does not cover any damage due to accident, misuse, abuse, or negligence.

We suggest that the purchaser retain the dated sales receipt as evidence of the original date of purchase. This warranty is not transferable and applies only to the original, registered purchaser.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. TIMELINE SHALL NOT BE LIABLE FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, EXCEPT WHERE PROHIBITED BY APPLICABLE LAW, OR AS DESCRIBED IN THE LIMITED WARRANTY ABOVE. TIMELINE EXPRESSLY DISCLAIMS ANY WARRANTY, EXPRESS OR IMPLIED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

USA: Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitation and exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

## Safety

To assist identification of potentially hazardous circumstances or procedures, warnings and cautions will be displayed with the appropriate text. Occasionally, information that provides an enhanced understanding of the text will be provided as a Note.

Note

A Note provides information about or an explanation of a topic related to the subject being discussed.

---

**Warning**

Warnings describe a procedure that if not followed as specified could potentially cause damage to the equipment, a loss of data, or create an error condition.

---

## Manual Contents and Use

To those who have never owned a TimeLine System Supervisor Unit (SSU): Every effort has been made to make this a concise and understandable reference.

Sophisticated transport control is one of the more complicated technologies that audio/video engineers, technicians and operators have to deal with. While maintaining power and flexibility, TimeLine has made the intricacies of the System Supervisor Unit transparent to the user.

The SSU will be of little value if you do not invest some time to familiarize yourself with the unit's interface and operational procedures. Do not hesitate to call us if you are confused about a particular feature, application or function. But first, **PLEASE READ THE MANUAL!**

<b>Introduction</b>	Provides a high level overview of the System Supervisor and a broad feature list.
<b>Applications</b>	Presents common applications and configurations for the SSU, audio, video and MIDI equipment.
<b>Installation</b>	Describes how to install the SSU.
<b>Getting Started</b>	Presents theory of operation instructions.
<b>Troubleshooting</b>	Describes methods to verify that your system is correctly installed and troubleshooting procedures to isolate parts of the system which may be incorrectly configured or installed.
<b>Features and Controls</b>	Contains a description of the basic operational features of the System Supervisor. The descriptions are grouped by function.
<b>Advanced Features</b>	Provides detailed operating information for some advanced applications.
<b>Appendix</b>	<p><u>Connector Pinouts</u> Descriptions of the back panel connectors and their pin assignments.</p> <p><u>Glossary</u> An alphabetic list of common terms used throughout the manual and in the industry in general.</p> <p><u>Cable Information</u> A short list of cables required to do an SSU installation.</p> <p><u>Engineering Changes</u> A compilation of TimeLine Service Bulletins and Installation Guides.</p>

## Typography Conventions Used

This manual uses the following Typographical conventions.

<b>Press</b>	Press a key, generally a movement key or function key such as [SELECT].
<b>Select</b>	Press or adjust the indicated key or knob to obtain a result or display
<b>[Square Brackets]</b>	This indicates a particular key on the front panel of the SSU.
<b>LED</b>	This is one of the lights on the front panel. LED means Light Emitting Diode.
<b>Key</b>	Each of the buttons, switches, knobs or keys on the front panel that you press or turn to cause something to happen.

# Table of Contents

---

<b>(1) Introduction</b>	
Features -----	1-2
Special Interface Options-----	1-2
System Overview -----	1-3
System Configurations -----	1-9
Software Versions -----	1-10
Specifications -----	1-10
<b>(2) Applications</b>	
Introduction -----	2-1
Post Production Audio-----	2-2
Using the System Supervisor with the Console Control Unit -----	2-3
Using the System Supervisor with the Keyboard Control Unit -----	2-4
Using the System Supervisor with Two Keyboard Controllers -----	2-5
Using the System Supervisor with the RMC -----	2-6
Using the System Supervisor with Console Automation Systems -----	2-7
Using the System Supervisor with a Digital Audio Workstation -----	2-8
<b>(3) Installation</b>	
Introduction -----	3-1
System Setup Planning -----	3-1
Part I - Installation -----	3-2
Cabling-----	3-3
Basic Interface Connections -----	3-5
Part II - Interface Diagrams-----	3-9
Part III - Communications Check Procedure -----	3-11
<b>(4) Getting Started</b>	
Introduction -----	4-1
Initialization and Configuration -----	4-1
Lynx Setup Procedure-----	4-3
Controller Setup Procedure - KCU -----	4-3
Controller Setup Procedure - CCU -----	4-4
Console Automation Setup Procedure - SSL-----	4-4
Console Automation Setup Procedure - Neve -----	4-5

- (5) Troubleshooting**
  - Introduction ----- 5-1
  - Diagnostics Block----- 5-1
  - Diagnostic LED Indicators----- 5-2
  - Diagnostic Terminal ----- 5-2
  - Communications Errors ----- 5-4
  
- (6) Features and Controls**
  - Overview ----- 6-1
  - Keyboard/Computer Control Ports ----- 6-2
  - Tributary Ports----- 6-2
  - Audio I/O Functions ----- 6-3
  - Logic I/O Functions ----- 6-4
  - MIDI Functions ----- 6-4
  - Diagnostics ----- 6-5
  - SSL Data Interface Option ----- 6-5
  - Front Panel Features----- 6-7
  - System Status Block----- 6-8
  - Diagnostics Block----- 6-14
  - Capture Block ----- 6-16
  - Gen Level Trimmers----- 6-17
  - Beep Trimmers----- 6-17
  - Rear Panel Features----- 6-18
  
- (7) Advanced Features**
  - SSL Data Interface System**
    - System Installation Requirements ----- 7-1
    - System Interconnection----- 7-4
    - Setting Up the SSL/System Supervisor System----- 7-11
    - Operating the SSL/Lynx Synchronizer System----- 7-21
    - Troubleshooting the SSL/Lynx Synchronizer System ----- 7-31
  - NEVE Interface Option**
    - System Installation Requirements ----- 7-34
    - System Interconnection----- 7-34
    - Setting Up the Neve/Lynx Synchronizer System ----- 7-36
  
- Appendix**
  - Introduction ----- A-1
  - Connector Pin Assignments ----- A-3
  - Glossary ----- A-13
  - Cable Information ----- A-25